

2M5 U0-U2 HP blue S A AM

COMPOSITION			
Conveying surface	Material	Polyurethane (TPU) - HP® system	
	Thickness	0.20 mm	0.008 in.
	Surface pattern	Smooth	
	Colour	HP® blue	
	Coefficient of friction	HF	
Textile carcass	Material	Polyester (PET) - HP® system	
	Plies no.	2	
	Weft type	Rigid	
Driving surface	Material	Fabric polyurethane (TPU) impregn. - HP® system	
	Thickness	---	mm --- in.
	Surface pattern	Fabric	
	Colour	Light blue	

TECHNICAL SPECIFICATIONS			
Total thickness		1.30 mm	0.05 in.
Weight		1.40 kg/m ²	0.29 lbs./sq.ft
Elongation at 1%		6 N/mm	34.0 lbs./in.
Max. admissible pull		12 N/mm	69.0 lbs./in.
Temperature resistance ⁽¹⁾	min.	-30 °C	-22 °F
	max.	110 °C	230 °F
⁽¹⁾ Use of the belt with limit values may reduce its life.			
Minimum radius / diameter ⁽²⁾			
■ Knife edge minimum radius		4 mm	0.16 in.
■ Bending roller min. diameter		8 mm	0.31 in.
■ Counter-bending roller min. diameter		16 mm	0.63 in.
⁽²⁾ The above mentioned values depend on the type of CHIORINO joint recommended.			
Coefficient of friction on driving surface			
■ Raw steel sheet		0.20 [-]	
■ Laminated plastic/wood		0.25 [-]	
■ Steel roller		0.20 [-]	
■ Rubberized roller		0.30 [-]	
Max. production width		2100 mm	83 in.

SUITABLE FOR	
Food:	slicing machines
Food:	dairy
Food:	bread
Food:	biscuits and crackers
Food:	sweet and salty snacks
Food:	chocolate bars
Food:	conveying of dried pasta
Food:	pizza



PRODUCT SYSTEM **HP[®] AM**

FEATURES	
Humidity influence	no
Suitable to metal detector	yes
Permanent antistatic dynamically (UNI EN ISO 21179)	yes
Static conductivity (UNI EN ISO 284)	no
Conveying on skid bed	yes
Conveying on rollers	yes
Conveying on skid bed on top and return	no
Troughed conveying	no
Swan neck conveying	no
Inclined conveying	yes
Accumulators belts	no
Curved conveyor	no
Chemical resistances link	12

COMPLIANCES	
REACH EC 1907/2006 Regulation and Amendments	
EC 1935/2004 Regulation and Amendments	
EC 2023/2006 Regulation and Amendments	
EU 10/2011, 2024/3190 Regulation and Amendments	
FDA (Food and Drug Administration)	
HACCP (Hazard Analysis and Critical Control Points)	

NOTES	
Product valid until 31/08/2026	


DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.

2M5 U0-U2 HP blue S A AM

Recommended joining procedure

SINGLE Z - 80 x 10 mm

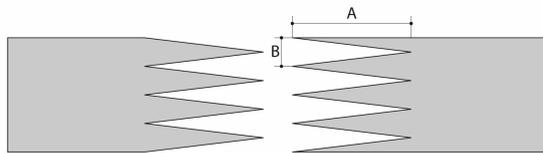

A = 80 mm
B = 10 mm

Other joining methods can be used:

- DIAGONAL SINGLE Z
- DOUBLE Z


Check our general catalogue to get further info on CHIORINO joining methods.

• Pressing

Heating press **P \ PL \ PLS**


Press settings	
Upper platen temperature	150 °C
Lower platen temperature	150 °C
Temperature gauge setting	150 °C
Curing time in press	3 min.
Pressure	2,5 bar
Film	TC753 - Film PU HP blue S AM
Cement	---

1. Use the KM330 thermometer to check the effective temperature inside the belt. Place the thermometer gauge as shown by the drawing at side.

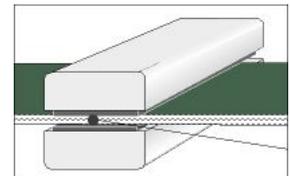

2. Allow the cooling cycle to be completed before removing the belt from the press.
3. A reliable strength of the joint is ensured, providing that temperatures reached by the press are those indicated in the table at side. A periodical inspection of the thermostats is recommended, to make sure they function correctly.

• Layout of components

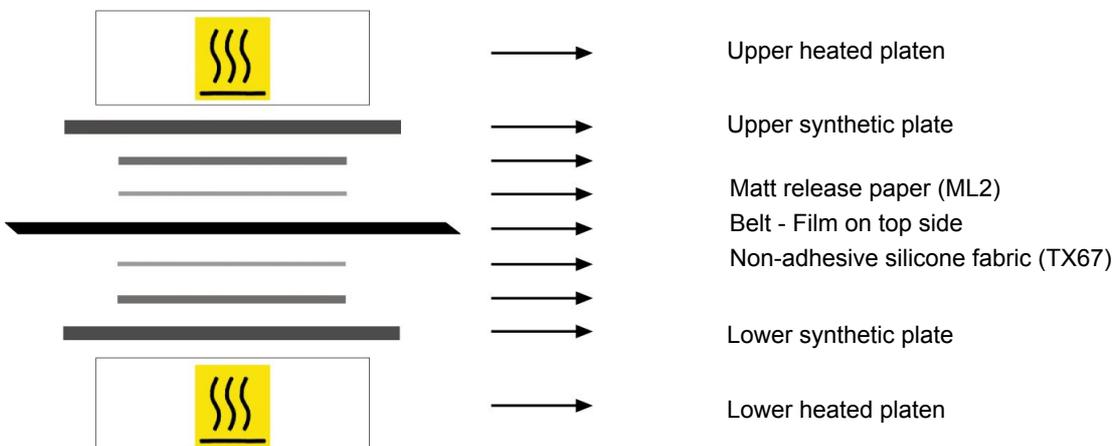

• Notes

PRODUCT CODE NA1766

Last Update: 02-10-2023

DISCLAIMER

The information contained in this document describes the features of the CHIORINO product as tested in a laboratory environment at a temperature of +23 degrees °C at 50% relative humidity. It does not necessarily reflect the conditions of industrial use and it does not guarantee the product to be suitable for certain applications. The client remains liable for the proper selection and correct use of the CHIORINO product. CHIORINO cannot be held responsible should damages arise from the use of its products. Necessary alterations to this data can be made without prior notice.